

 
HS7000 HitchSafe

Hitch Receiver Safe/Vault

COMBINATION SET/ RESET INSTRUCTIONS

You can set a new combination for your HS7000 4-Dial HitchSafe any time by following the below directions:



1. Set to current opening combination (factory default setting is **0-0-0-0**). The combination must be on the opening number prior to resetting.
2. Test to make sure you are on the opening combination by flipping down the drawer release. Return drawer release to up position before continuing. **(a)**
3. Turn reset screw on side of drawer clockwise 90 degrees to the vertical position **(b)**.

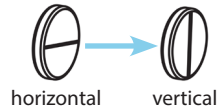

4. Set dials to your desired combination **(c)**. Make a note of your new combination. *If you forget or lose your combination you will be locked out. There is no way to retrieve your code!*
5. Once you have set the new code, return the reset screw (counter-clockwise), back to the horizontal position **(d)**.
6. Double-check the numbers on the dials to be sure you have set the dials to the number you intended.
7. **IMPORTANT! TEST YOUR COMBINATION** before replacing the drawer back into the HitchSafe receiver by scrambling the dials, setting it to your new combination, and then confirming the drawer release flips down (and you will see the catches on the sides go inwards).

Notes

- The drawer can only be inserted into the HitchSafe when the correct combination is set.
- The dials will only turn when the drawer release **(a)** is in the upright position.
- HitchSafe is not responsible for lost or mis-dialed combinations
- When setting a new combination, always test it prior to inserting the drawer into the HitchSafe.
- Be sure to write down your combination and store it in a secure location.
- The HitchSafe offers security with 10,000 possible combinations, it's essential not to lose your code!

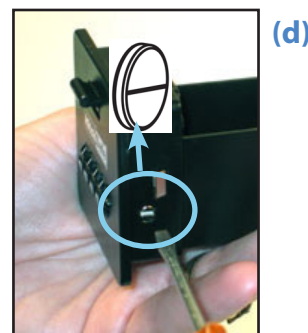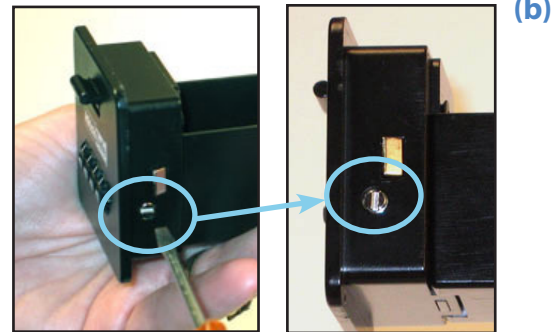

See page 2 for
troubleshooting
guidelines

HS7000 HitchSafe

Hitch Receiver Safe/Vault

COMBINATION SET/ RESET INSTRUCTIONS

Troubleshooting

If in **Step 6** if you test the combination and the drawer release button does not flip down, try the following steps. This tests if you accidentally rolled one number off while setting your combination.

- a. Confirm the combination is on your intended number.
- b. On the first dial, try rolling up one number and then down one number, each time testing the release button.
- c. Return the first dial to the first number in your intended combination.
- d. Repeat steps **b** and **c** on the remaining 3 dials.
- e. If you still cannot discover your combination you are locked out and you will not be able to access your HitchSafe.

Tow Hitch Covers

If the drawer is locked inside the HitchSafe and the Hitchsafe is locked inside the hitch receiver and you have forgotten your combination, you will need to take your vehicle to a locksmith.