

SL-590, SL-591

KeyGuard Pro Lock Box

Wall Mount / Car Window Mount



COMBINATION SET/ RESET INSTRUCTIONS

You can set a new combination for your KeyGuard Pro any time by following the below directions:

Combination Change/Reset Instructions

1. KeyGuard Pro does not come preset to any combination. For best security, choose a combination between 4 to 7 numbers and/or letters.
2. The first time you set the combination, press and release the clear button (a) to clear the combination and reset the buttons.
3. Push down on the open tab (b). The KeyGuard Pro will open, exposing access to the backside of the faceplate.
4. On the backside of the faceplate, there are 11 yellow buttons with arrows pointing upward. Below the arrows are numbers that correspond to the numbers on the front of the door. If using a lettered combination, find the corresponding numbers for the lettered group.
5. Remove the white plastic combination change "key" (c) at the bottom. (Note: a small screwdriver can also be used).
6. Using the combination change "key" (c), push in and rotate each number that corresponds with your desired combination 180 degrees until the arrow on the button is pointing down toward base of KeyGuard Pro. Do this for each letter and/or number in the combination. (Note: Arrows on buttons must be pointing directly down at a 6 o'clock orientation or your combination will not work.)

Continue to Step 8 on Page 2.

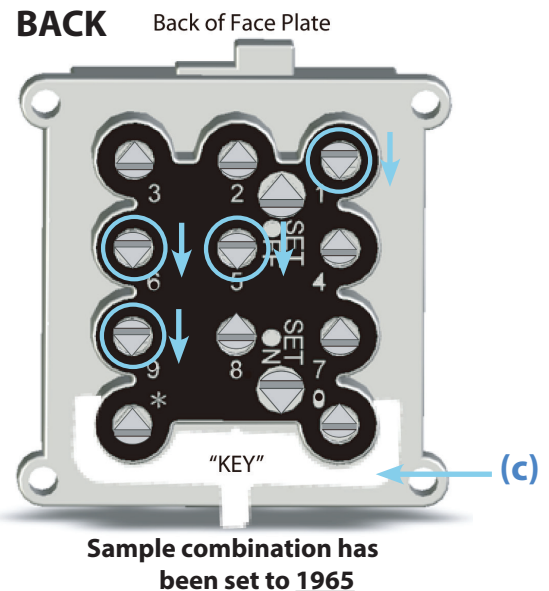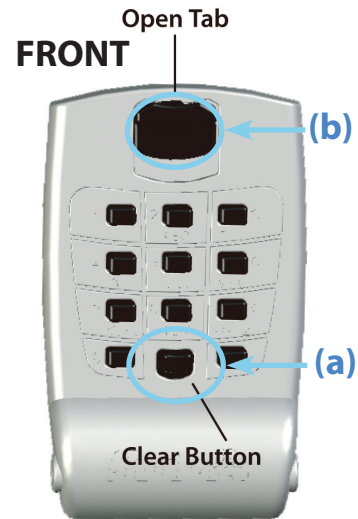

SL-590, SL-591

KeyGuard Pro Lock Box

Wall Mount / Car Window Mount

COMBINATION SET/ RESET INSTRUCTIONS

8. Double check combination to make sure it is set properly. Remember each button that is activated with the arrow pointing downwards represents part of combination.
9. Test combination before closing face of KeyGuard Pro. Press clear key **(a)**, select the combination and pull down the open tab **(b)** to open. If tab pulls down, combination is set correctly. If it does not pull down, **DO NOT CLOSE THE COVER**. Check arrows again to make sure the correct ones are activated and that they are not crooked or misaligned.

Using KeyGuard Pro

1. To use your key box, press clear button **(a)** each time it is used, then enter in the combination and pull down on the open tab **(b)**.
2. To close KeyGuard Pro, put in combination and pull down open tab **(b)**. Close front face and release open tab **(b)**. KeyGuard Pro should now be secured in the locked position.

